


Installation instruction

ARAT Special mount for Navigation Systems

Artikel-Nr.: NS 1365
for Alfa Romeo 159
2005



Note: The NS mount will fit
In any of the three airvent housings

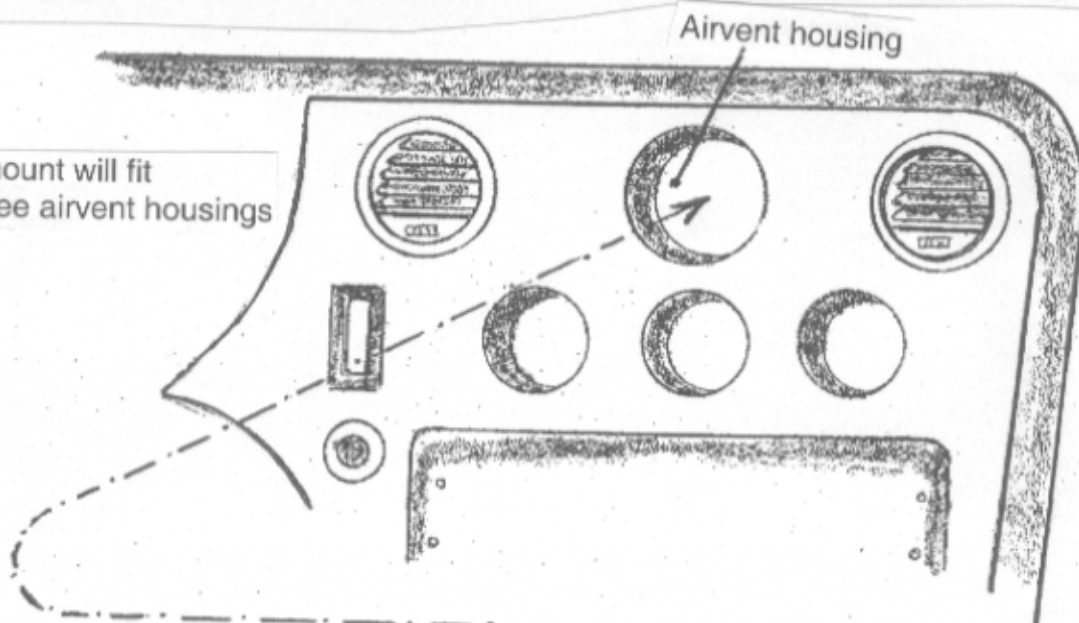

Airvent assembly

Supplied screw
3.5 x 16

Supplied screw
3.5 x 16

NS mount

Locating pegs

Installation instruction

1. Prise out and remove the airvent assembly from its housing, And place the airvent vanes in the horizontal position
2. Slide the navigation mount into position between the airvent vanes
3. drill through the side of the airvent assembly $\varnothing 3.5$ mm and countersink, (pre-drill the locating pegs of the NS mount, $\varnothing 2$ mm) with the supplied screws secure the mount through the side of the airvent assembly
4. Replace the complete airvent assembly including ARAT mount Into the airvent housing of the dashboard